



Clips 100

Clips 110

Clips 120

Clips 140

Canon		Clips 100	Clips 110	Clips 120	Clips 140
	DC21/DC22	•			
	DC210/230	•			
	DC-220V	•			
	DC310	•			
	DC320	•			
	DC330	•			
	DC40	•			
	DC410/DC420	•			
	DC50	•			
	FS10	•			
	FS100	•			
	FS11	•			
	FS21/FS22/FS200	•			
	G30Hi/35Hi/45Hi				•
	MD110 DV	•			
	MD160	•			
	MV500/500i/550i/530i/600/600i/630i/650i	•			
	MV850i	•			
	MV930/940/950/960	•			
	MVX100i/150i			•	
	MVX250i/200i/200	•			
	MVX25i/20i	•			
	MVX330i	•			
	MVX35i/30i	•			
	MVX430	•			
	MVX450/460	•			
	Optura 300/MVX10i	•			
	Optura Xi/MV3Xi				•
	V60HI/65Hi/75Hi				•
	Vixia HF S10/S100	•			
	Vixia HF10/HF11	•			
	Vixia HF100	•			
	Vixia HF20/HF200	•			
	Vixia HG10	•			
	Vixia HG20/HG21	•			
	Vixia HR10	•			
	Vixia HV20	•			
	Vixia HV30	•			
	Vixia HV40	•			
	ZR80/85/90	•			
	ZR800	•			
	ZR830/850	•			
	ZR900	•			
	ZR930	•			
	ZR950	•			
	ZR960	•			
Hitachi	DZ-BD10HA			•	
	DZ-BD70A			•	
	DZ-BD7HA			•	
	DZ-GX5020A/5080A	•			
	DZ-HS300A	•			
	DZ-HS500A	•			
	DZ-MV230			•	
	DZ-MV230A/270A/270E			•	
	DZ-MV380	•			
	DZ-MV550/MV580		•		
	DZ-MV780A	•			
	HS300A/500A	•			

*Availability may vary depending on country and location.



Clips 100

Clips 110

Clips 120

Clips 140

JVC		Clips 100	Clips 110	Clips 120	Clips 140
	Everio GZ-MG130	•			
	Everio GZ-MG145	•			
	Everio GZ-MG155/255	•			
	Everio GZ-MG555U	•			
	Everio GZ-MG575	•			
	GR-AXM18				•
	GR-D20EK/D50EK	•			
	GR-D250	•			
	GR-D33/72/93	•			
	GR-D73US	•			
	GR-D750/770/796	•			
	GR-D850/870	•			
	GR-DA30	•			
	GR-DVL120U				•
	GR-DVM76/96	•			
	GR-DX25/77/95/97	•			
	GR-FX15EK/SX25/FXM39E/SXM49/SXM58				•
	GR-SXM38				•
	GR-XM250US/740U				•
	GZ-HD3		•		
	GZ-HD300/HD320	•			
	GZ-HD7/HD7U			•	
	GZ-HM200	•			
	GZ-MG130	•			
	GZ-MG255	•			
	GZ-MG330/335/365/465	•			
	GZ-MG555US	•			
	GZ-MG730	•			
	GZ-MS120/MS130	•			



		Clips 100	Clips 110	Clips 120	Clips 140
Panasonic	AG-EZ50			•	
	AG-HSC1U	•			
	HDC-DX1			•	
	HDC-FX5			•	
	HDC-HS20	•			
	HDC-HS250	•			
	HDC-HS300	•			
	HDC-HS9	•			
	HDC-SD1/SD3	•			
	HDC-SD100/HS100	•			
	HDC-SD20/TM20	•			
	HDC-SD9	•			
	HDC-TM300	•			
	NV-GS1/GS4/GS5	•			
	NV-GS11B/15B	•			
	NV-GS120B/200B	•			
	NV-GS22B/33B/55B	•			
	NV-GS230	•			
	NV-GS250/400B				•
	NV-GS320	•			
	NV-GS60	•			
	NV-GS70	•			
	NV-GX7	•			
	PV-DC152/252/352	•			
	PV-DV203	•			
	PV-DV52/102/202/402				•
	PV-DV702				•
	PV-DV952			•	
	PV-GS120/200			•	
	PV-GS150	•			
	PV-GS180	•			
	PV-GS300	•			
	PV-GS31	•			
	PV-GS320			•	
	PV-GS33/GS55	•			
	PV-GS35	•			
	PV-GS39	•			
	PV-GS400			•	
	PV-GS500			•	
	PV-GS50S	•			
	PV-GS80/85	•			
	PV-GS9/12/14/15	•			
	PV-GS90	•			
	PV-SD5000			•	
	SDR-H18	•			
	SDR-H20/H250	•			
	SDR-H200	•			
	SDR-H40/H60	•			
	SDR-S10	•			
	SDR-S10P1	•			
SDR-S150	•				
VDR-D150	•				
VDR-D160	•				
VDR-D250	•				
VDR-D300			•		
VDR-D310			•		
VDR-D50	•				
VDR-M53	•				
VDR-M75	•				
Pentax	K20D w/compact zoom			•	
Samsung	SCD180	•			
	SC-D382	•			
	SC-DC173	•			
	SC-DC575	•			
	SC-HMX10	•			
	SC-HMX20C	•			
	SC-HMX-H100/H106	•			
	SC-HMX-H104/H105	•			
	SC-HMX-R10	•			
	SC-MX20	•			
	SC-X105L	•			
	VP-D230/D270i			•	
	VP-D323/D325i	•			
	VP-D361i	•			
	VPD5000i	•			
	VP-D590i	•			
	VP-D6040i/D6050i	•			
	VP-D80i			•	
	VP-D963 WI	•			
	VP-D97	•			
	VP-DX10	•			
	VP-HMX10X	•			
	VP-W90/VPL700/VPL900				•

*Availability may vary depending on country and location.



Clips 100



Clips 110



Clips 120



Clips 140

Sharp	VL-AX1H/AX1U				•
	VL-MC500H/500U	•			
	VL-NZ55U/105U	•			
	VL-Z1U/Z3U/Z5H/Z7U	•			
Sigma	DP-1	•			



Clips 100

Clips 110

Clips 120

Clips 140

Sony		Clips 100	Clips 110	Clips 120	Clips 140
DCR-DVD108		•			
DCR-DVD203E		•			
DCR-DVD205/305		•			
DCR-DVD308		•			
DCR-DVD403E		•			
DCR-DVD405			•		
DCR-DVD408/508		•			
DCR-DVD505		•			
DCR-DVD605		•			
DCR-DVD608/708		•			
DCR-DVD610/810		•			
DCR-DVD650/850		•			
DCR-DVD705		•			
DCR-DVD808E/908E		•			
DCR-HC18E/20/20E/30/30E/40/40E		•			
DCR-HC26		•			
DCR-HC28		•			
DCR-HC35E		•			
DCR-HC36		•			
DCR-HC38/46/HC48		•			
DCR-HC47E		•			
DCR-HC52		•			
DCR-HC62		•			
DCR-HC65/85/85E				•	
DCR-HC90E/96		•			
DCR-PC55		•			
DCR-PC8		•			
DCR-SR-200/300		•			
DCR-SR40		•			
DCR-SR42/SR62/SR82		•			
DCR-SR45/SR46/SR85		•			
DCR-SR47/67/87		•			
DCR-SX40/41/60		•			
DCR-TRV128/328			•		
DCR-TRV138			•		
DCR-TRV140					•
DCR-TRV240/340					•
DCR-TRV280			•		
DCR-TRV285E				•	
DSR-PDX10					•
HDR-CX100		•			
HDR-CX12		•			
HDR-CX7		•			
HDR-HC3				•	
HDR-HC5				•	
HDR-HC7/HC9				•	
HDR-SR1				•	
HDR-SR10		•			
HDR-SR11/SR12		•			
HDR-SR5/SR7		•			
HDR-UX1				•	
HDR-UX10		•			
HDR-UX5/UX7				•	
HDR-XR100/200V		•			
HDR-XR500V/520V		•			
HVR-A1U					•

*Availability may vary depending on country and location.