


LOWEPRO RIDGE SERIES MATRIX 6-2009

		 Ridge 10	 Ridge 20	 Ridge 30	 Ridge 60
Agfa	DC-8330i		•		
Argus	DC-6340	•			
BenQ	C840		•		
	DC C1050	•			
	DC C740i	•			
	DC C750	•			
	DC C820	•			
	DC C850	•			
	DC E100		•		
	DC E800	•			
	DSC X800		•		

LOWEPRO RIDGE SERIES MATRIX 6-2009

		 Ridge 10	 Ridge 20	 Ridge 30	 Ridge 60
Canon	DC210/230				•
	DC-220V				•
	Digital IXUS 80	•			
	IXUS 70	•			
	IXY Digital 820IS		•		
	PowerShot A1000 IS		•		
	PowerShot A2000 IS		•		
	PowerShot A2100 IS		•		
	PowerShot A470		•		
	PowerShot A480		•		
	PowerShot A570 IS			•	
	PowerShot A580			•	
	PowerShot A590 IS			•	
	PowerShot A650 IS				•
	PowerShot A720 IS				•
	PowerShot E1		•		
	PowerShot G10				•
	PowerShot G9				•
	PowerShot SD1000/IXUS 70	•			
	PowerShot SD1100 IS/IXUS 80	•			
	PowerShot SD1200 IS	•			
	PowerShot SD770/IXUS 85	•			
	PowerShot SD780 IS	•			
	PowerShot SD790 IS/IXUS 90 IS	•			
	PowerShot SD850 IS/IXUS 950 IS	•			
	PowerShot SD870 IS/IXUS 860 IS		•		
	PowerShot SD880 IS/IXUS 870 IS		•		
	PowerShot SD890 IS/IXUS 970 IS		•		
	PowerShot SD950 IS/Digital IXUS 960 IS		•		
	PowerShot SD960 IS		•		
	PowerShot SD970 IS		•		
	PowerShot SD990 IS/IXUS 980 IS		•		
	PowerShot SX100 IS				•
	PowerShot TX-1	•			
SD1200 IS	•				
SD850IS/Ixus 950IS	•				
ZR800				•	
ZR900				•	
ZR930				•	
ZR950				•	

LOWEPRO RIDGE SERIES MATRIX 6-2009

		 Ridge 10	 Ridge 20	 Ridge 30	 Ridge 60
GE	A730		•		
	A735/A835	•			
	E1035/E1235		•		
	E1050	•			
	E840S		•		
	G2/G3		•		
	H855		•		
HP	Photosmart E337		•		
	Photosmart E427		•		
	Photosmart M437		•		
	Photosmart M447		•		
	Photosmart M537		•		
	Photosmart M547		•		
	Photosmart M627		•		
	Photosmart M637		•		
	Photosmart M737		•		
	Photosmart Mz67		•		
	Photosmart R742	•			
	Photosmart R837		•		
	Photosmart R847		•		
	Photosmart R937		•		

LOWEPRO RIDGE SERIES MATRIX 6-2009

		 Ridge 10	 Ridge 20	 Ridge 30	 Ridge 60
Kodak	EasyShare C180	•			
	EasyShare C513	•			
	EasyShare C603		•		
	EasyShare C613		•		
	EasyShare C653		•		
	EasyShare C703		•		
	EasyShare C713	•			
	EasyShare C763	•			
	EasyShare C913	•			
	EasyShare M1033		•		
	EasyShare M1063	•			
	EasyShare M1073 IS	•			
	EasyShare M1093 IS		•		
	EasyShare M320/M340		•		
	EasyShare M380	•			
	EasyShare M753/M853	•			
	EasyShare M763/M863		•		
	EasyShare M873/M883	•			
	EasyShare M893 IS	•			
	EasyShare Picture Viewer	•			
	EasyShare V1073/V1273		•		
	EasyShare V1233/V1253		•		
	EasyShare V1285		•		
	EasyShare V803/V1003	•			
	EasyShare Z1012 IS				•
	EasyShare Z1015 IS				•
	EasyShare Z1085 IS			•	
	EasyShare Z1275		•		
	EasyShare Z1285		•		
	EasyShare Z1485 IS			•	
	EasyShare Z8612 IS				•
	EasyShare Z885		•		
Zi6		•			
Zx1		•			
Leica	C-Lux 1		•		
	C-Lux 3		•		
	D-Lux 3	•			
Minox	DC 7022		•		
	DC-6033 WP			•	
	DC-8011		•		
Mustek	DV-4500			•	
	GSmart D35		•		

LOWEPRO RIDGE SERIES MATRIX 6-2009



Ridge 10

Ridge 20

Ridge 30

Ridge 60

		Ridge 10	Ridge 20	Ridge 30	Ridge 60
Nikon	Coolpix L14/L15	•			
	Coolpix L16/L18		•		
	Coolpix L19/L20		•		
	Coolpix P5000/P5100			•	
	Coolpix P60		•		
	Coolpix S200	•			
	Coolpix S202	•			
	Coolpix S210	•			
	Coolpix S220	•			
	Coolpix S51/S51c		•		
	Coolpix S510	•			
	Coolpix S52	•			
	Coolpix S520		•		
	Coolpix S52c		•		
	Coolpix S550	•			
	Coolpix S560		•		
	Coolpix S60	•			
	Coolpix S600	•			
	Coolpix S610/S610c	•			
	Coolpix S620	•			
	Coolpix S630		•		
Coolpix S700	•				
Coolpix S710	•				

LOWEPRO RIDGE SERIES MATRIX 6-2009



Ridge 10

Ridge 20

Ridge 30

Ridge 60

Olympus		Ridge 10	Ridge 20	Ridge 30	Ridge 60
FE-190		•			
FE-20			•		
FE-25		•			
FE-280		•			
FE-290			•		
FE-300			•		
FE-3000/3010			•		
FE-310			•		
FE-320		•			
FE-340			•		
FE-350			•		
FE-360			•		
FE-370			•		
FE-45			•		
FE-5000/5010			•		
Mju 1040		•			
Mju 1050SW			•		
Mju 1060		•			
SP-570UZ					•
Stylus 1010/1020			•		
Stylus 1030SW			•		
Stylus 1040		•			
Stylus 1050SW			•		
Stylus 1200/Mju Digital 1200			•		
Stylus 550WP/Mju 550WP			•		
Stylus 7000/Mju 7000			•		
Stylus 770SW		•			
Stylus 780			•		
Stylus 790SW/Mju 790SW			•		
Stylus 830/Mju Digital 830			•		
Stylus 840			•		
Stylus 850SW			•		
Stylus Tough 6000/Mju 6000		•			
Stylus Tough 8000/Mju 8000			•		
X835		•			

LOWEPRO RIDGE SERIES MATRIX 6-2009



Ridge 10

Ridge 20

Ridge 30

Ridge 60

		Ridge 10	Ridge 20	Ridge 30	Ridge 60
Panasonic	Lumix DMC- FX07		•		
	Lumix DMC-FS12/FS62		•		
	Lumix DMC-FS15		•		
	Lumix DMC-FS20		•		
	Lumix DMC-FS25		•		
	Lumix DMC-FS3/FS5		•		
	Lumix DMC-FS42		•		
	Lumix DMC-FS6		•		
	Lumix DMC-FS7		•		
	Lumix DMC-FX100		•		
	Lumix DMC-FX150		•		
	Lumix DMC-FX33		•		
	Lumix DMC-FX35		•		
	Lumix DMC-FX37		•		
	Lumix DMC-FX40/FX48		•		
	Lumix DMC-FX500		•		
	Lumix DMC-FX55		•		
	Lumix DMC-FX550/FX580		•		
	Lumix DMC-LS60/LS75		•		
	Lumix DMC-LS80		•		
	Lumix DMC-LS85		•		
	Lumix DMC-LZ10		•		
	Lumix DMC-LZ6/LZ7		•		
	Lumix DMC-LZ8		•		
	Lumix DMC-TS1/FT1		•		
	Lumix DMC-TZ2/TZ3		•		
	Lumix DMC-TZ4/TZ5		•		
	Lumix DMC-TZ50		•		
Lumix DMC-TZ6/ZS1		•			
Lumix DMC-TZ7/ZS3		•			
Pentax	Optio A30	•			
	Optio A40	•			
	Optio E40		•		
	Optio E50		•		
	Optio E60		•		
	Optio E70		•		
	Optio L30		•		
	Optio M30		•		
	Optio M40		•		
	Optio M50/M60		•		
	Optio P70		•		
	Optio S10		•		
	Optio S12	•			
	Optio T30		•		
	Optio V10		•		
	Optio V20		•		
	Optio W30		•		
	Optio W60		•		
	Optio Z10		•		

*Availability may vary by country or location

LOWEPRO RIDGE SERIES MATRIX 6-2009

		 Ridge 10	 Ridge 20	 Ridge 30	 Ridge 60
Polaroid	A310		•		
	i533P	•			
	i631		•		
	i633		•		
	i733	•			
	i832W		•		
Pure Digital	Flip Mino/Mino HD	•			
	Flip Video		•		
	Flip Video Ultra		•		
Ricoh	Caplio 500SE				•
	Caplio GX100	•			
	Caplio GX200		•		
	Caplio RR770		•		
	CX1		•		
	G600			•	
	GR Digital II		•		
	R10		•		
	R50		•		
R8		•			

LOWEPRO RIDGE SERIES MATRIX 6-2009



Ridge 10

Ridge 20

Ridge 30

Ridge 60

		Ridge 10	Ridge 20	Ridge 30	Ridge 60
Samsung	CL5/PL10		•		
	Digimax i100		•		
	Digimax i70	•			
	Digimax i8	•			
	Digimax i80	•			
	Digimax i85	•			
	Digimax L730		•		
	Digimax L74 Wide		•		
	L100/110/200/210	•			
	L201/SL201	•			
	L310W	•			
	L73		•		
	L730		•		
	L830		•		
	L83T		•		
	NV100HD		•		
	NV11		•		
	NV24HD		•		
	NV30/NV40		•		
	NV4		•		
	NV8/10/15/20		•		
	NV9/TL9		•		
	S1060		•		
	S1070	•			
	S630/S730		•		
	S73		•		
	S760/S860	•			
	S85		•		
	S850/S1050		•		
	SC-X105L		•		
	SL102/ES55	•			
	SL201	•			
	SL202/PL50	•			
	SL30/ES15		•		
SL420/PL60	•				
SL620/PL65	•				
SL820/IT100	•				
ST10		•			
TL320/WB100	•				
TL34HD				•	
WB500		•			
Sanyo	DSC-S5 Xacti	•			
	VPC-C40		•		
	VPC-J4 Xacti		•		
	Xacti VPC-CG65		•		
	Xacti VPC-S50	•			
	Xacti VPS-T700	•			
	Xaxcti VPC-CA6		•		

*Availability may vary by country or location

LOWEPRO RIDGE SERIES MATRIX 6-2009

		 Ridge 10	 Ridge 20	 Ridge 30	 Ridge 60
Sigma	DP-1				•
	DP-2				•
Sony	DSC-G1		•		
	DSC-G3	•			
	DSC-S650/S700/S800	•			
	DSC-S730	•			
	DSC-S750/S780	•			
	DSC-S950	•			
	DSC-S980	•			
	DSC-T100	•			
	DSC-T2	•			
	DSC-T20	•			
	DSC-T200		•		
	DSC-T300		•		
	DSC-T500		•		
	DSC-T70	•			
	DSC-T700		•		
	DSC-T77/T770		•		
	DSC-T90/T900		•		
	DSC-W110/W200		•		
	DSC-W115/W125	•			
	DSC-W120/W130	•			
	DSC-W150/W170		•		
	DSC-W210/W220	•			
	DSC-W230/W290	•			
	DSC-W300		•		
	HDR-TG1		•		
	NSC-GC1		•		
Vivitar	V6320		•		